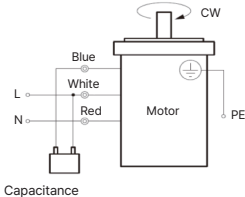
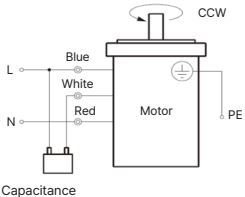
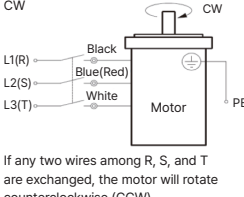
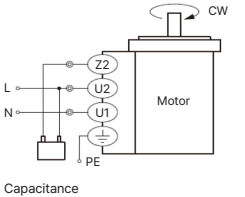
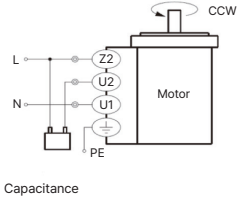
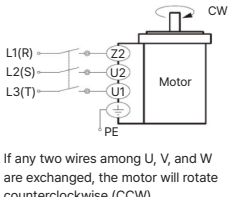




Wiring Diagram

Precautions

- Please make sure to switch the rotation direction of the single-phase motor only after the motor has come to a complete stop.
- Attempting to change the rotation direction while the motor is running may result in the direction not switching or taking extra time to switch.

Wiring Type	4-Pole Voltage		2-Pole Voltage
	Voltage Code : A, E, H, C, S, S3		Voltage Code : B, D, T, T3
	Clockwise Rotation (CW)	Counterclockwise Rotation (CCW)	Clockwise Rotation (CW)
Lead Wire Type	 Capacitance	 Capacitance	 If any two wires among R, S, and T are exchanged, the motor will rotate counterclockwise (CCW)
Terminal Box Type	 Capacitance	 Capacitance	 If any two wires among U, V, and W are exchanged, the motor will rotate counterclockwise (CCW)

(Applicable only to 2-pole, 3W)

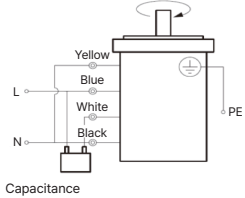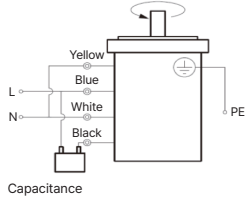Wiring Type	4-Pole Voltage	
	Voltage Code : A, E, H, C, S, S3	
	Clockwise Rotation (CW)	Counterclockwise Rotation (CCW)
Lead Wire Type	 Capacitance	 Capacitance