
## **Cable Carriers**

### Flap Open-Close Full Cover Type

# **Cable Carriers - Low Particle Generation, Low Noise**

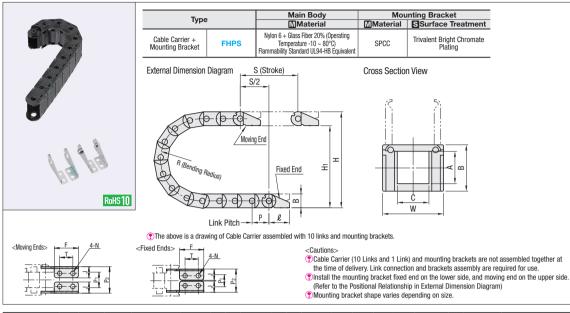

Part Numb		Dandina	NIk	Mounting	Cab	le C	arrie	r Din	nensi	ons		M	lour	ntin	nting Dimensions			ons H			HF	К	Weight per
Part Numb	er		Number of Links	Direction	Α	В	С	w	Р	Q.	F	т		N	Movin	Moving End		End Fixed End				(Arc +	Meter (kg)
Туре	No.	nauius	OI LIIKS	*	A	Р	C	W	۲	Ł	г	'	J	IN	P <sub>1</sub>	P <sub>2</sub>	P <sub>1</sub>	P <sub>2</sub>	Height)		Physical Height)	Margin)	(Reference)
	202	30	8~43		13	20	14	26	20	30	20	10	10	4 5	9.8	21.8	8	20	80	60	95	144.2	0.28
	203	30	8~43		13	20	20	32	20	30	20	10	10	4.5	15.8	27.8	14	26	80	60	95	144.2	0.31
	204	38	7~34	_	13	22	22	40	26	43					18.6	34.6	15	31	98	76	118	179.3	0.5
FHPS	206	38	7~34	A	13	22	12	60	26	12	32	18	14	5.8	38.6	54.6	35	51	98	76	118	179.3	0.6
(Cable Carrier +	200	50	9~36		13	22	42	00	20	43					30.0	34.0	33	31	122	100	142	217	0.0
Mounting Brackets)	400	70	8~45	В	25	40	EO	78	45	eo.	40	0.4	22	7	44	72	40 00		180	140	210	319.8	1.00
	408	100	10~47		25	40	00	10	40	טט	40	24	22	′	44	12	40	68	240	200	270	414	1.36
	440	70	8~45		O.E.	40	07	117	A.E.	eo.	40	0.4	22	7	83		79	107	180	140	210	319.8	17
	412	100	11~49		25	40	9/	117	45	υÜ	40	24	22	/	03	111	79	107	240	200	270	414	1.7


Part Numb	er	Bending Radius	Number of Links		Unit Price Cable Carrier + Mounting Bracket (One Link Unit				
Туре	No.	Selection	OI LIIIKS	*	Price x Number of Links) + Mounting Bracket Price				
	202	30	8~43						
	203	30	8~43						
	204	38	7~34						
FHPS	000	38	7~34	A					
(Cable Carrier +	206	50	9~36						
Mounting Brackets)	400	70	8~45	В					
	408	100	10~47						
	440	70	8~45						
	412	100	11~49						

- <Cautions on Model Selection>
- A Cable Carrier and suitable Mounting Brackets (Moving Ends x1 set, Fixed Ends x1 set) are in a set.
- Please note that part numbers vary depending on inner/outer circumference mounting.



Part Number	-	Bending Radius	-	Number of Links	-	Mounting Direction
FHPS204	-	38	-	12	-	Α

### **■**Mounting Direction

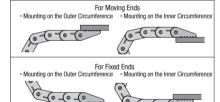


#### \* Mounting Bracket Structural Components

WOULL	ing bracket	oti dotai di O	omponents
No.		Mounting Bracket St	
NO.	Direction	For Moving Ends	
202~206	Α	Mounting on the Outer Circumference	Common to Mounting on the Outer and Inner Circumferences
202~200	В	Mounting on the Inner Circumference	Common to Mounting on the Outer and Inner Circumferences
408, 412	Α		Mounting on the Outer Circumference
400, 412	В	Common to Mounting on the Outer and Inner Circumferences	Mounting on the Inner Circumference


#### · Flap Opening and Closing



• Flaps are laid on one another.
Insert a flathead screwdriver in the with each other and push the side window and pry the flap to open. Start with the top flap.

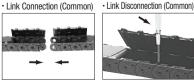

• Open the link flaps, insert and push down a flathead both ends to joint fit together.

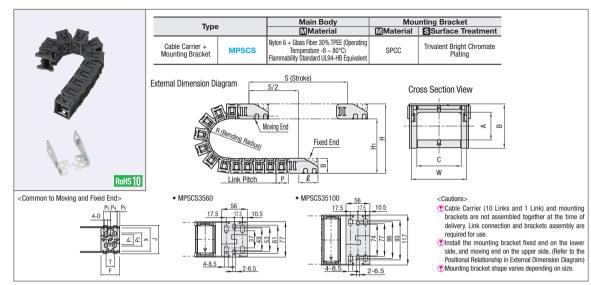

Part Number Bending			Number	Mounting	Cab	able Carrier Dimensions Mounting Dimension							ons		_		Н		HF	K	Weight per					
Type		Radius Selection		Direction	Α	В	С	w	Р	l	F	Т	J	х	D	Applicable Screw (D)	P1	P <sub>2</sub>	Рз	P4	<b>P</b> 5	(Mounting Height)		(Required Physical Height)	(Arc + Margin)	Meter (kg) (Reference)
	4500	28	8~67		15	٥٢	20	20	10	20	200	10	20.0	20.4	4.0	N/4	10	15	8	8	3	95	70	115	128.6	0.04
	1520	34	9~68		15	25	20	28	18	29	22	10	32.8	30.4	4.2	M4	12	15				105	80	125	144.3	0.34
		31	8~77	1																		115	82	145	150.4	
	2040	38	9~78		20	33	40	50	20	35	26	14	54.8	52.4	6.5	M6	21	27				130	97	160	174	0.7
		58	12~81	s																		170	137	200	236.8	
MPSCS	2540	60	9~57	(Common to	25	40	40	50	30	E2 E			56.4	53.2		M6	21	40				185	145	215	251.5	0.77
(Cable Carrier +	2540	85	11~60	Mounting on the							40	0.4			7	IVIO	21	40				235	195	265	330	0.77
Mounting Brackets)	2560	60	9~57	Outer and Inner	25	40	60	70	30	52.5			76.4		l ′	M6	35.4		-		- 1	185	145	215	251.5	0.94
	2580	60	9~57	Circumferences)	25	40	80	90	30	52.5			96.4	93.2		M6	60	75.2				185	145	215	251.5	1.2
	3560	75	8~51	I					45													240	185	270	323.9	1.4
	3300	100	10~53		33	55	00	13	40	00.0					_							295	240	325	410.2	1.4
	35100	75	8~47		35	55	100	112	45	60 E		_	_	-	-		- 1	_				240	185	270	323.9	2
	33100	100	10~49	1	اددا	33	100	113	45	00.5												295	240	325	410.2	

Part Number	er	Bending Radius	Number	Mounting Direction	Unit Price Cable Carrier + Mounting Bracket (One Link Unit				
Туре	No.	Selection	of Links		Price x Number of Links) + Mounting Bracket P				
	1520	28	8~67						
	1320	34	9~68						
		31	8~77						
	2040	38	9~78						
		58	12~81						
MPSCS	2540	60	9~57	(Common to Mounting					
(Cable Carrier +		85	11~60	on the Outer and Inner					
Mounting Brackets)	2560	60	9~57	Circumferences)					
	2580	60	9~57						
	3560	75	8~51						
	3300	100	10~53						
	35100	75	8~47						
	33100	100	10~49						

<Cautions on Model Selection>

• A Cable Carrier and suitable Mounting Brackets (Moving Ends x1 set, Fixed Ends x1 set) are in a set.

Mounting Direction


Mounting on the Outer Circumference • Mounting on the Inner Circumference



In the case of new designs, there may be a possibility that carrier links It is recommended that links are selected longer by one or two links, and are adjusted (removed) at the time of installing (removing) device.




#### Low Particle Generation, Low Noise Cable Carriers (MPSCS) - Link Connection

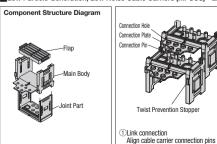


with the connection holes. Be sure to keep clear of the twist prevention mated with the cable carrier.



Insert the cable carrier in the main body 3Insert joint parts Be sure that the connection plate is fully

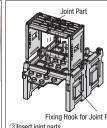

Insert the joint part into the cable carrier to align joint part connection holes with the connection pins.

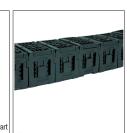

Confirm the connection Please be sure if there is no gap between the joint parts and the cable carrier, and if the joint parts mounting hooks are secure.