
HYDRAULIC CYLINDER - COMPACT

—Compact (Switch Mounted Double Rod Type) FA 70 • 140kgf/cm² Rod Side Flange Type—

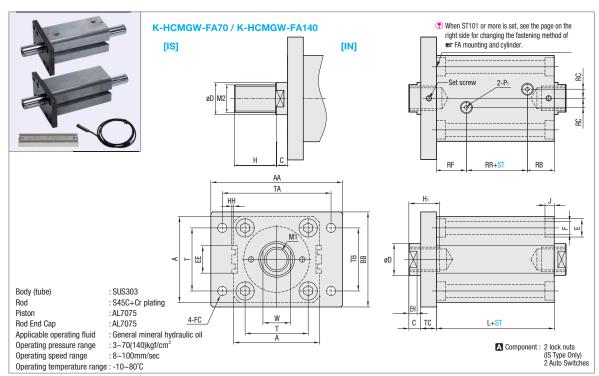


							_																				
Internal	Rod B Type			Α	т	w	ВВ	ть		TA		н	С	TC	Eu	E	F	J	DD	DE	DD	RC	P.	FC	ши	EE	
Diameter	D	Н	M1	M2		'	VV	ВВ	п	AA	IA	L	п		10	En	-	Г.	٦	nn	nr	nb	nC	F ₁	FC	пп	
32	18	25	M12×P1.75	M16×P1.5	62	47	14	69	46	118	95	87	15	10	13	7	11	6.6	6.5	31	28	28	10	PT1/4	11	2	23
40	22	30	M16×P2	M20×P1.5	70	52	19	72	46	118	95	87	20	10	13	7	14	9	8.6	33	27	27	10	PT1/4	11	2	26
50	28	35	M20×P2.5	M24×P1.5	80	58	24	85	58	145	115	90	24	11	16	8	17.5	11	10.8	34	28	28	10	PT1/4	14	2	30
63	35	45	M27×P3	M30×P1.5	94	69	30	98	65	165	132	97	33	13	18	9	20	14	13	37	30	30	10	PT1/4	18	2	30
80	45	60	M30×P3.5	M39×P1.5	114	86	41	118	87	190	155	110	36	17	21	14	23	16	15.2	40	35	35	15	PT3/8	18	2	30
100	55	75	M39×P4	M48×P1.5	140	105	50	150	109	230	190	150	45	20	24	14	26	18	17.5	50	50	50	18	PT1/2	22	1	30
125	70	95	M48×P5	M64×P2.0	170	130	65	175	130	272	224	190	50	25	28	18	32	22	21.5	50	70	70	23	PT3/4	26	1	30

• When ST101 or more is set, see the page on the right side for changing the fastening method of FA mounting and cylinder.

Part Nu	mber		1mm increments	Rod End				
TYPE	No.	Internal Diameter	ST	l l	М			
ITPE	NO.		31	Female Screw	Male Screw			
		32						
		40						
K-HCMGW	E470	50						
(Switch Mounted Double	FA70	63	5 ≦ ST ≦ 200	IN	IS			
Rod Type)	FA140	80						
		100						
		125						


^{*} The K-HCMGW type has two default auto switches mounted on the right. If you want to change the quantity of the auto switch, please contact us.









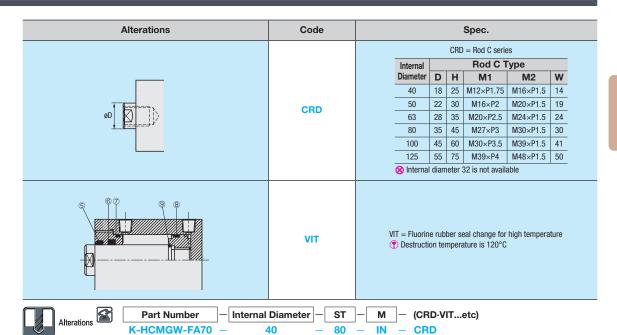


100

50





<Specifications of auto switch>

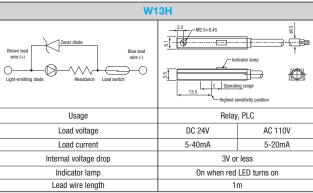

- * The default packaging quantity is 1. Please purchase two switches when purchase of 1
- * Short strokes such as ST5~30 are replaced with low sensitivity switch.
- * Please contact us while changing the lead wire length.

■ Mounting method







■ Tightening method of FA mounting and cylinder when ST101 or more is set


CRD-VIT

<Basic fastening method>

IS







• Fasten the bolt from the front of the FA plate to the cylinder side. (Existing mounting hole is removed.)











■ Terms & Conditions:

- Warranty period: 1 year (based on the date of MISUMI shipment) * Check the warranty policy for details.
- The internal part of the cylinder is damaged due to the use of contaminated oil (mixing iron, chips, etc.), repair cost will be charged regardless of the warranty
- Tor the buckling load, please check reference data.
- At the time of mounting, please align the centre of the rod's axis with the direction of load's motion accurately. If the centre is shifted, it may cause malfunction, leakage, packing damage and cylinder damage.
- When using extreme cold, extreme high temperature, extreme low pressure, and extreme high pressure, please contacts us before ordering. Packing and seal changes are required depending on the environment.
- If a problem occurs during use, send the hydraulic cylinder without disassembling it for easy identification.