
HYDRAULIC CYLINDER - COMPACT

-Compact (Double Rod Type) FA 70 • 140kgf/cm² Rod Side Flange Type-

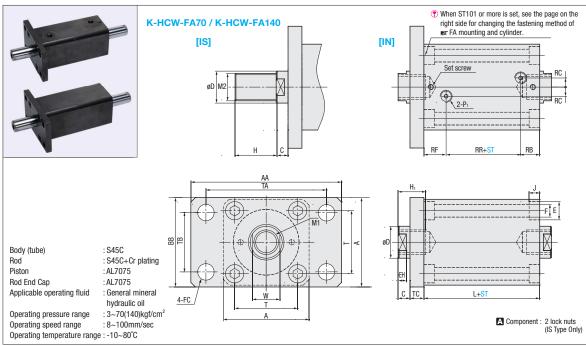

Internal			Rod B Typ	oe .	_	т	w	ВВ	тв		Τ.	L	Н,	c -	тс	ЕН	Е	F	J	RR	RF	RB	RC	P ₁	FC
Diameter	D	Н	M1	M2	Α	'				AA	IA	_	п		10	ЕП		Г	3						FC
32	18	25	M12×P1.75	M16×P1.5	62	47	14	69	46	118	95	72	15	10	13	7	11	6.6	6.5	16	28	28	10	PT1/4	11
40	22	30	M16×P2	M20×P1.5	70	52	19	72	46	118	95	72	20	10	13	7	14	9	8.6	18	27	27	10	PT1/4	11
50	28	35	M20×P2.5	M24×P1.5	80	58	24	85	58	145	115	75	24	11	16	8	17.5	11	10.8	19	28	28	10	PT1/4	14
63	35	45	M27×P3	M30×P1.5	94	69	30	98	65	165	132	82	33	13	18	9	20	14	13	22	30	30	10	PT1/4	18
80	45	60	M30×P3.5	M39×P1.5	114	86	41	118	87	190	155	95	36	17	21	14	23	16	15.2	25	35	35	15	PT3/8	18
100	55	75	M39×P4	M48×P1.5	140	105	50	150	109	230	190	135	45	20	24	14	26	18	17.5	35	50	50	18	PT1/2	22
125	70	95	M48×P5	M64×P2.0	170	130	65	175	130	272	224	190	50	25	28	18	32	22	21.5	50	70	70	23	PT3/4	26

• When ST101 or more is set, see the page on the right side for changing the fastening method of FA mounting and cylinder.


Part N	umber		1mm increments	Rod End M			
TYPE	No.	Internal Diameter	ST				
ITPE	NO.		31	Female Screw	Male Screw		
		32			IS		
		40					
		50	5 ≦ ST ≦ 200				
K-HCW (Double Rod Type)	FA70	63		IN			
(Double floa Type)	FA140	80					
		100					
		125					










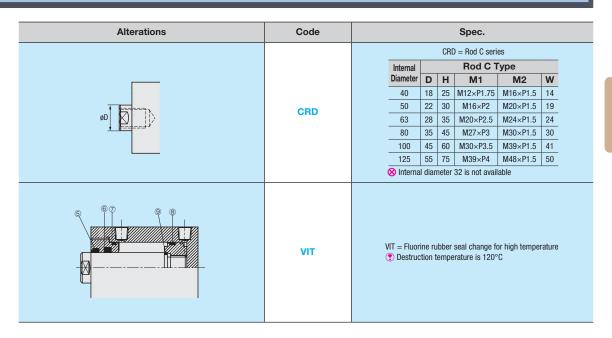










■ Mounting method






■ Tightening method of FA mounting and cylinder when ST101 or more is set

<Basic fastening method>



 Insert the bolts from the back of the cylinder and secure it to the FA mounting.



 Fasten the bolt from the front of the FA plate to the cylinder side. (Existing mounting hole is removed.)

Terms & Conditions:

- Warranty period: 1 year (based on the date of MISUMI shipment)Check the warranty policy for details.
- If the internal part of the cylinder is damaged due to the use of contaminated oil (mixing iron, chips, etc.), repair cost will be charged regardless of the warranty period.
- For the buckling load, please check reference data.
- At the time of mounting, please align the centre of the rod's axis with the direction of load's motion accurately. If the centre is shifted, it may cause malfunction, leakage, packing damage and cylinder damage.
- When using extreme cold, extreme high temperature, extreme low pressure, and extreme high pressure, please contacts us before ordering. Packing and seal changes are required depending on the environment.
- If a problem occurs during use, send the hydraulic cylinder without disassembling it for easy identification.