

Part Number			Α	AA	АВ	В	С	D	Е	F	G	H				к	K1	К3	м	N		
Type	Cylinder b	ore Mod	e of action	^	AA	AD	ь		U			G		1	'	J	I.	KI	K3	IVI	IN IN	
	10	(Single action)		6	18	12	23	12	37.8	57	29	15.2	11	.2	4	16	M3×0.5	6	6	27	φ 11H9 Depth 2	
MGMHZ	16			7.5	22	15	24.5	15	42.5	67.3	38	20.9	14	1.9	5	24	M4×0.7	4.5	8	30	φ 17H9 Depth 2φ 21H9 Depth 3	
	20			9.5	32	18	29	20	52.8	84.8	50	26.3	16	5.3	8	30	M5×0.8	8	10	35		
Cylinder bore		0	P	•	Q	R		S		U	١ ١	/ \	w x			Υ		Y1		Y2	Z	
10		11.4	M2.5×	0.45	3	5.7	M3×0.5		23	9	1	9	5	11	φ	φ 2H9 Depth 3		5.2-0.	02	7.6-0.0	02 16.4-0.05	
16	16 16 M3>		0.5	4	7	N	M5×0.8		7.5	1	9	8	13	φ	φ 3H9 Depth 3		6.5-0.02		11-0.0	2 23.6-0.05		
20		18.6	M4×	0.7 5		9	N	M5×0.8		10	2	3	10	15	φ	4H9 E	epth 4	7.5-0.02		16.8-0	2 27.6-0.05	




Part Number
MGMHZ10S









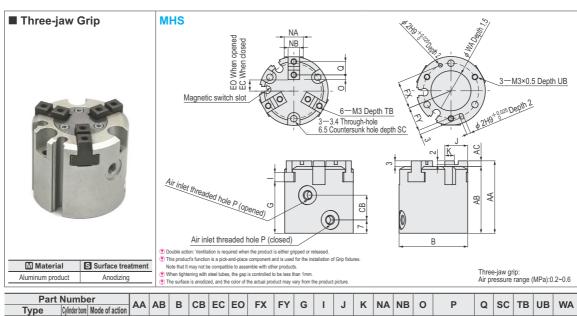

Part Number				AA AB	В	CP	EC	EO	FX	FY	G			ĸ	NA	NB		D	Q	sc	ТВ	UB	WA
Type	Cylinder bore	Mode of action	AA	AD	В	СВ	EC	EU	F.A.	Г	G		J	, r	INA	IND	U	Г	Q	30	ID	UB	VVA
MHS	16	D	35	32	30	11	5	7	12.5	11	25	4	10	4	8	5h9	2	M3×0.5	6	8	5	4.5	17H9
	20	(Double action)	38	35	36	13	6	8	14.5	13	27	5	12	5	10	6h9	2.5	M5×0.8	7	9.5	6	6	21H9



Part Number MHS16D







